

Mark
Bric®

BANNERUP® Cabrio™

A Family of Dependable Displays


Item no. 81150



Mounting instruction



Mounting of panels (not included)

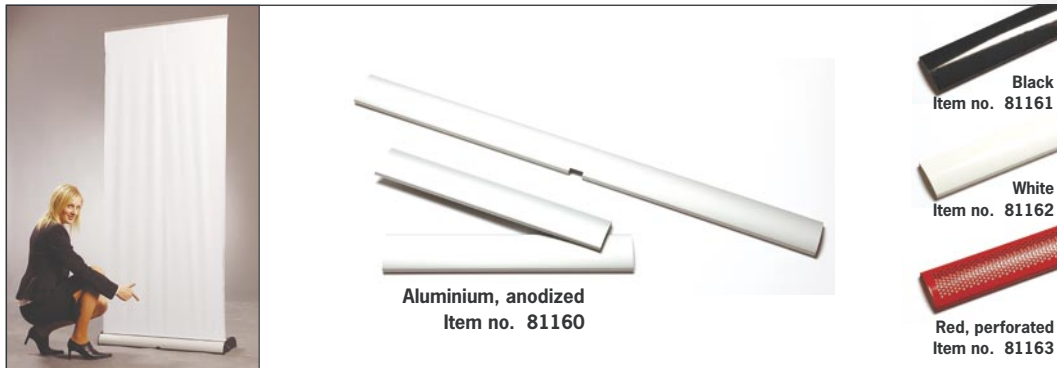

Front panel



Hook the panel on bottom rod



Snap-lock panel on top rod

Back panels




Hook the panel on bottom rod



Snap-lock panel on top rod



Graphic panel production

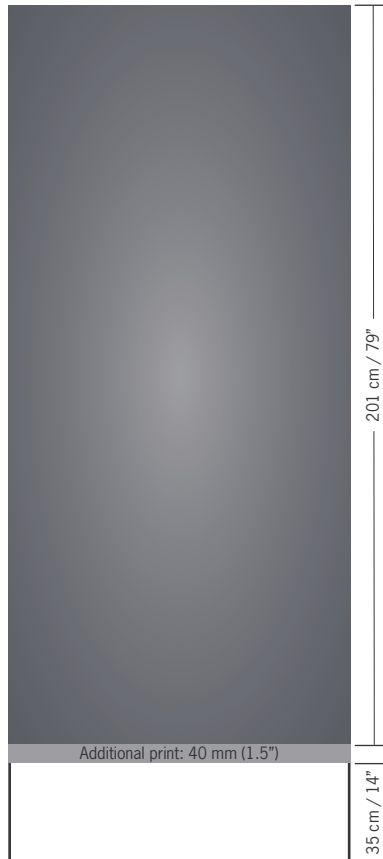

Size of graphic panels

The banner material can be vinyl, fabric, double sided laminated paper etc. Recommended maximum thickness of material: 0,45 mm (0.018")

Banner dimensions

Visible part of banner material:	201 cm	(79")
Printed length of banner:	205 cm	(81")
Min. extra banner material (unprinted):	35 cm	(14")
Total length of banner material:	240 cm	(95")
Width, max (do not exceed):	88 cm	(34.65")

BannerUp Facts

Banner width	88 cm	(34.65")
Full height w/ cassette	209 cm	(82.2")
Visible banner height	200 cm	(78.7")
Weight (excl. banner)	6 kg	(13.2 lbs)
Cassette dimension	22x8,5x89 cm	(8.6"d x 3.3"h x 35"w)

Mount the graphic banner



Slide the bottom rail into the cassette.



Never pull out the "Locking Pin" until a banner is loaded into the cassette

Hold the banner and remove the locking pin and let the banner slowly roll into the cassette.

Change the graphic banner



Roll the old banner out of the cassette and insert the locking pin.



Slide the banner out

Mount the banner rails



Mount the bottom rail on the reverse side of the banner.



Mount the snap rail on top of the banner.



Close the rail.

Tension adjustment



All cassettes are pretensioned before delivery.

If adjustment is needed, hold the cassette firmly in place then depress and turn the adjusting screw clockwise to increase the tension (the tension mechanism adjusts in halfturn increments). Slowly release pressure on the screw turning slightly counter-clockwise and allow it to again lock in place. If tension has been lost completely, we recommend 20-25 full clockwise turns.