

Move the lock



1 Remove the two screws for the lock at the reverse side of the post.



2 Turn the lock 180°



3 Replace the screws.

Move the handle



1 Remove the two screws for the handle at the reverse side of the post.



2 Move the handle to the left side.




3 Replace the screws.

Change the door

for opening at the right side
(Outer curved door 30°, item IS-DOOR-30)




Standard opening

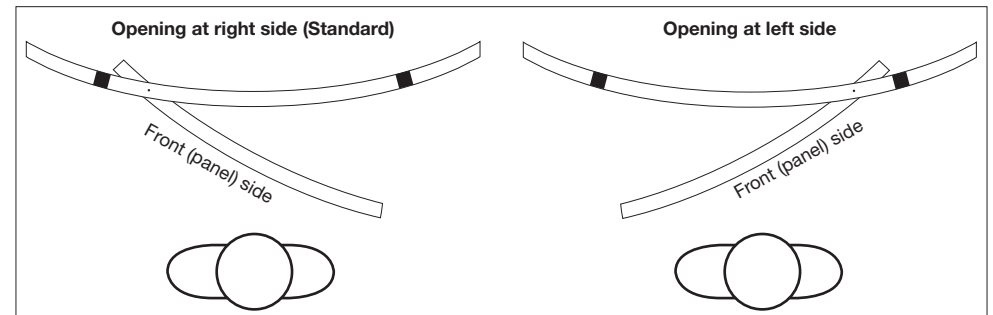


Standard configuration

with opening at the right side

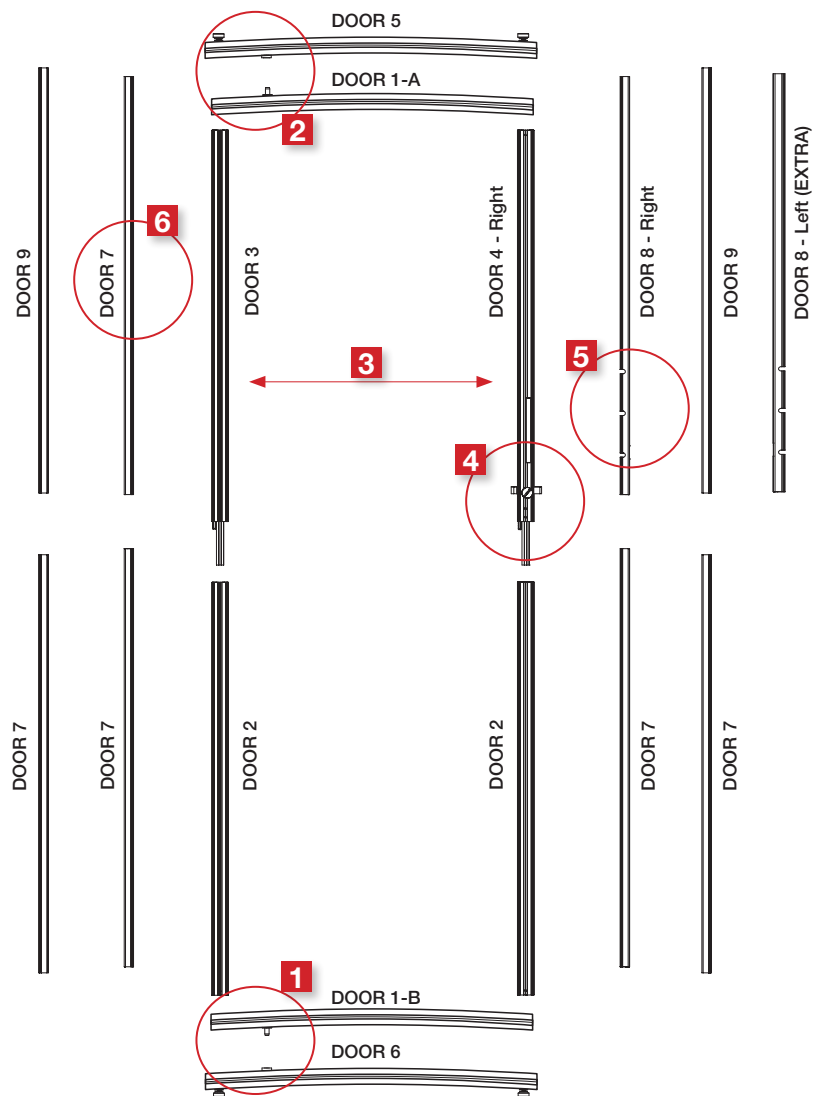

New configuration

with opening at the left side

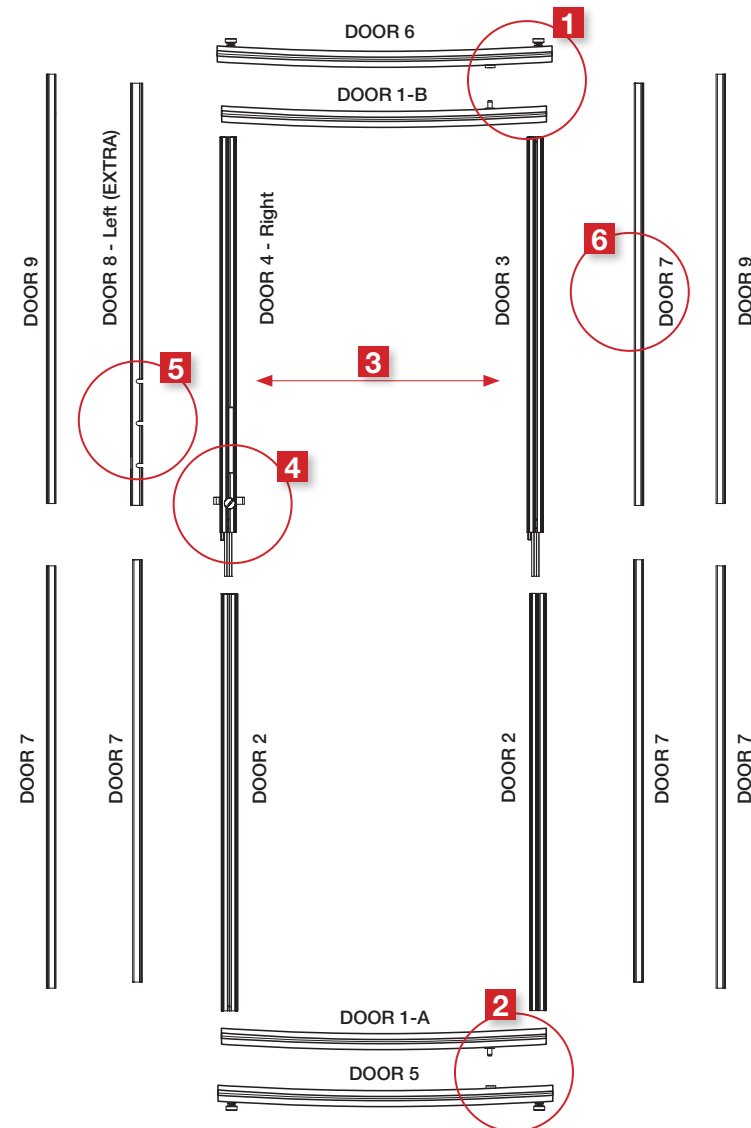

1. Rotate 180° the beams DOOR 1-B and DOOR 6 and move to the top
2. Rotate 180° the beams DOOR 1-A and DOOR 5 and move to the bottom.
3. Exchange the post DOOR 3 and DOOR 4 with each other
4. Change the handle and the lock (see page 4)
5. Delete the corner trim DOOR 8-RIGHT and place the DOOR 8-LEFT in the left side
6. Move the top corner trim DOOR 7 to the right side