

## Move the lock



1 Remove the two screws for the lock at the reverse side of the post.

2 Turn the lock 180°

3 Replace the screws.

## Move the handle




1 Remove the two screws for the handle at the reverse side of the post.

2 Move the handle to the left side.

3 Replace the screws.

## Change the door


inside curve for opening at the left side  
(Outer curved door 30°, item IS-DOOR-30)

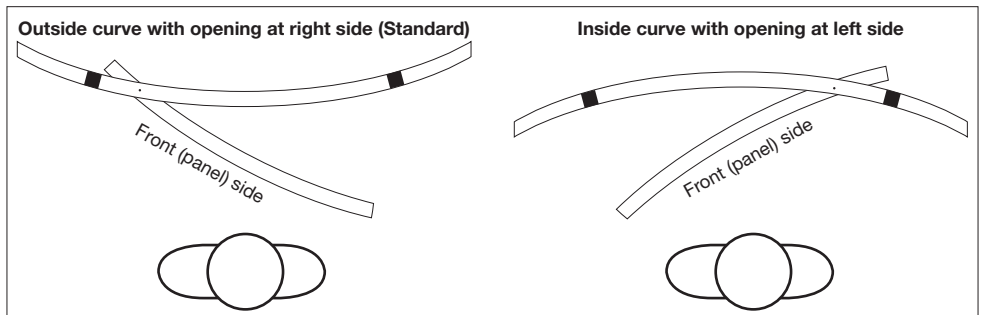

**Please observe: This configuration needs new panel sizes, see page 3!**

## Standard configuration


with opening at the right side

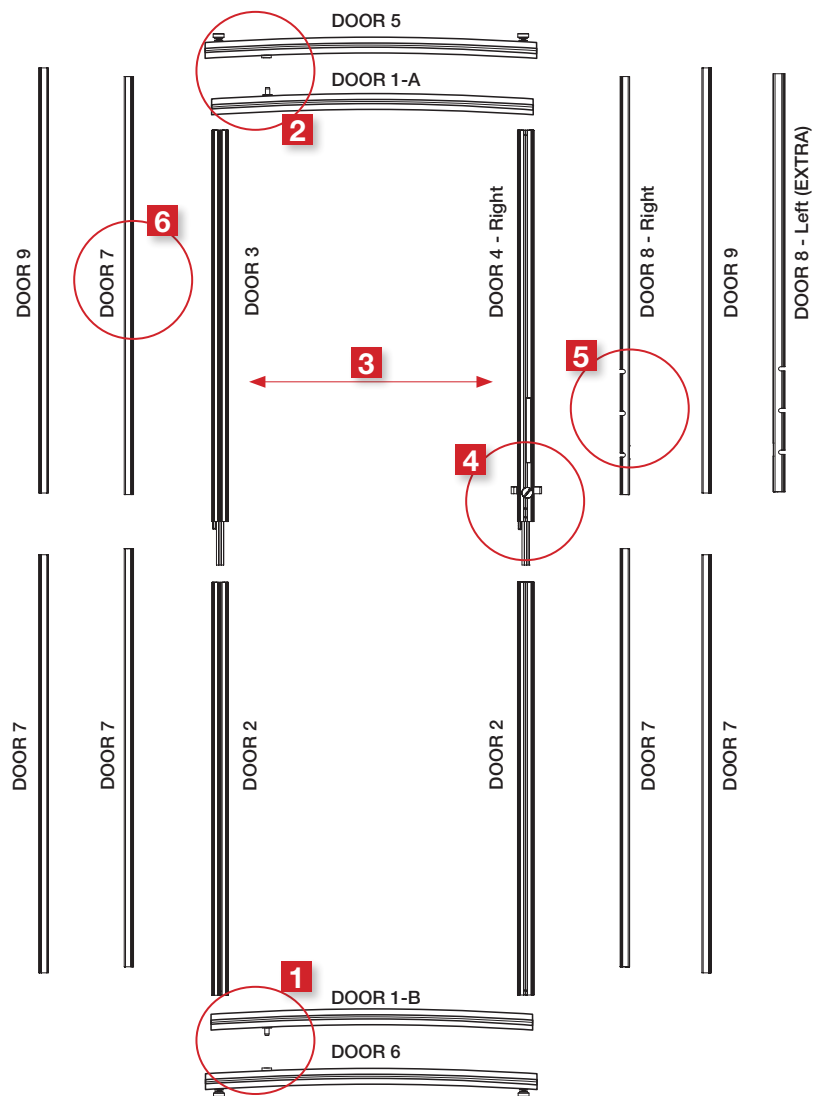

1. Rotate 180° the beams DOOR 1-B and DOOR 6.
2. Rotate 180° the beams DOOR 1-A and DOOR 5.
3. Exchange the post DOOR 3 and DOOR 4 with each other
4. Change the handle and the lock (see page 4)
5. Delete the corner trim DOOR 8-RIGHT and place the DOOR 8-LEFT in the left side
6. Move the top corner trim DOOR 7 to the right side

## New configuration

Inside curve with opening at the left side

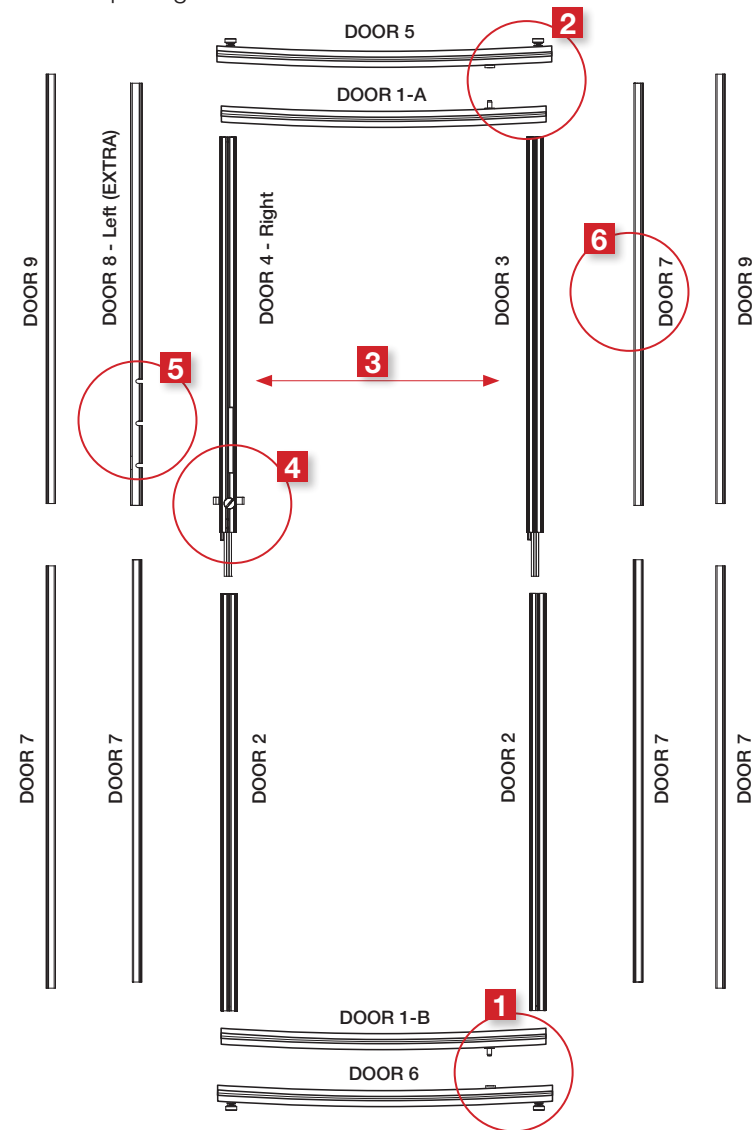

### Graphic panel sizes

#### Graphic over the door.

The graphic over the door will be 779 mm / 30.67" wide.

#### Graphic for the door.

The graphic for the door will be 680 mm / 26.77" wide and 1925 mm / 75.79" high