

Leveling of the posts/system

The most common reason for problems with the graphic panels is when the flooring is uneven, not level. In that case it is important to completely level the hardware system before attaching the graphic panels, both in the **front/rear** and the **left/right** directions.



1. Start by releasing the two fast clamps on the right side post.

2. Sliding the beams upward leans the posts to the left.

3. Sliding the beams downwards shifts the posts to the right.



4. Use a leveling tool to get your system straight.

5. When the section is level, lock the fast clamps in position.

Post leveling tool
Item IS-9012



ISOframe[®]
A Family of Dependable Displays

Important step to mount an Exhibit unit

Attach the FastClamp correctly to the post

Incorrect mounting will weaken the clamp mechanism.



Open FASTclamp



Wrong – not square



Wrong – not square



Correct – square



Close FASTclamp



Mark Bric Display Corp.
North America Tel. 800.742.6275 Fax 800.565.9506 E-mail: markbric@markbric.com

Mark Bric Display AB
Worldwide Headquarters Tel. +46 33 480 460 Fax +46 33 480 470 E-mail: display@markbric.se

Mounting the system

1



1. Attach beams to base posts, aligned with the bottom of the posts.

2



2. Attach the extension post on top of the bottom post

3a



3a. Attach the next beam, aligned with the top of the extension posts. Adjust the top beam until the post is vertically 'level' or aligned (see last page). Use the spirit leveling tool....

3b



3b. ...or use a cross laser

4



4. Attach the top post with the plastic top hub

5



5. For straight-wall sections, best results will be obtained by raising the straight beams to the top position to the horizontal mag tape at the top of the panels.

6



6. You are now ready to mount the graphic panels

7



7. Mount corner trims at the ends to provide the finished look.