

Umbrella displays

3 different shapes/sizes:

Square (229 x 229 cm)
with hard case, Item 80650
with soft bag, Item 80651

Portrait (180 x 269 cm)
with hard case, Item 80653
with soft bag, Item 80654

Landscape (269 x 180 cm)
with hard case, Item 80656
with soft bag, Item 80657



Watch the ShowFlex assembly video on our website for a more detailed instruction.



1 Take out ShowFlex from the bag/case and set it upright on a table/on the floor.




2 Unfold unit by pushing hub toward table/floor.



3 Pivot telescoping leg 90° to lock hub and click in at the locking pin.



4 Unfold arms and lock springloaded sliders.

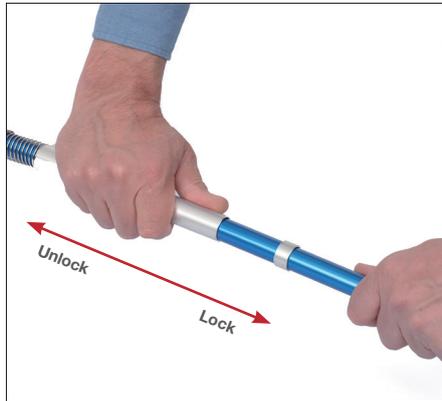

5 Lock and unlock the arms with the springloaded sliders.



6 Extend the telescopic leg.



7 Pull hub away from the graphic to stretch the system to complete setup.



8 Hang the transport case with the shoulder strap on the back hub to add counterbalance to the display.