

**Ceiling mounting kit**


Item no: IS-9383

We recommend this for all Fabric frames.  
You need minimum 2 kits for each frame.  
This kit holds maximum 18 kilo.

**Complete with:**

- 1 Ceiling bracket
- 1 Wire holder
- 1 Wire, 1,5 mm thick, 2 metre long
- 1 Adjustable frame hook
- 1 Loop screw

You also need 5 mm thick screw to mount the ceiling bracket at the roof.

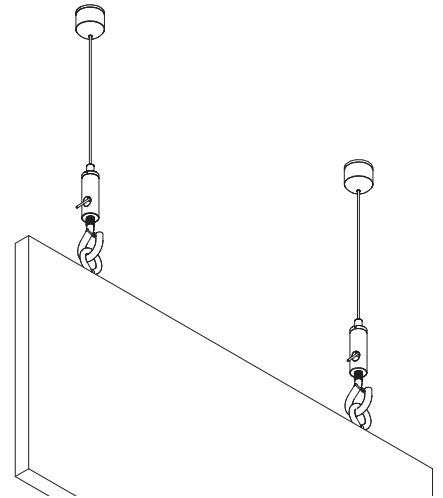


Ceiling bracket




Screw, not included




Wire, 1,5 mm thick, 2 metre long

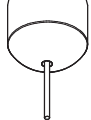

Wire holder

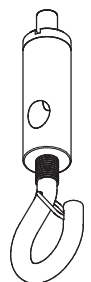


Adjustable frame hook

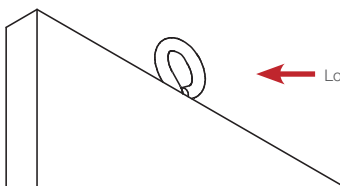


Loop screw

- 1** Attach the ceiling bracket to the roof. *We recommend a professional carpenter to do that.*
- 2** Screw the Wire holder into the Ceiling bracket with the wire mounted inside.
- 3** Pull the wire into the adjustable frame hook from the top.
- 4** Drill a 6mm hole into each side of the frame in the centre of the profile and attach the Loop screw with the two nuts, one in the top and one inside the frame, and then lock.
- 5** Attach the frame hook to the loop screw in both sides and adjust the wire at the frame hook for right height. See right side.

**Adjust the length of wire**

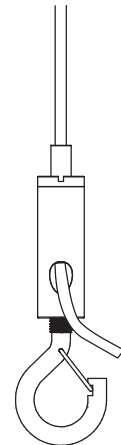

- 1** Adjust the gripper up. When you let go of the gripper it will automatically lock itself on the wire.

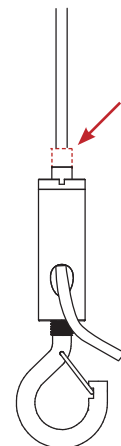

- 2** Press the pin and adjust down. When you press the pin the lock opens and the gripper slides freely up and down the wire. Release the pin to lock the gripper again.