

**Connect the corners**



1 Lift FASTclamp lever and fully insert the 90° L-bracket. Lock clamp by pressing lever back down into the channel. Repeat for both clamps on this frame profile.



2 Insert the brackets of the first profile into the Fastclamp grooves of the second profile.




3 Lock the FASTclamp and make the same in all 4 corners.

**Connect the straight profile**



1 Lift the FASTclamp lever while inserting the profile stem. Make sure that the small metal bracket is in direct contact with the FASTclamp.

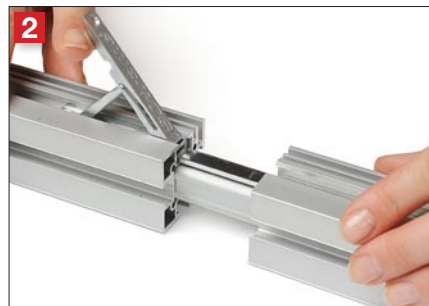

2 Push together.



3 Lock the FASTclamp.

**Connect the twist-in foot**



1 Attach the foot parallel to the profile, at any desired position.



2 Twist the foot to lock in place. Foot can be twisted in either direction, depending on which end you prefer for the front of your display.



3 Twist to 90° and stop.

